


STEEL LOWERING BLOCK KIT

INSTALLATION INSTRUCTIONS

AVAILABLE IN 1" 2" 3" AND 4" SIZE. COME COMPLETE WITH U-BOLTS, WASHERS AND NUTS.

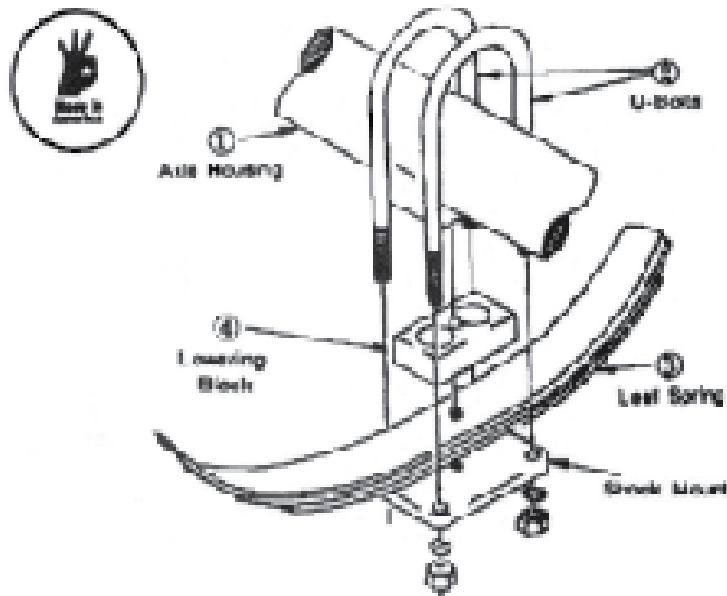

Doing one side at a time, remove the u-bolts. Using a hydraulic jack raise the axle away from the leaf spring and lower the axle down so the weight is on the block. Install and tighten the u-bolts evenly to 80ft lbs. Repeat the procedure on the other side of the truck. If there is excess u-bolts cut accordantly. It recommended to make a habit of checking tightness every few months

www.djmsuspension.com